





INSTANT CANOPY


INSTRUCTIONS

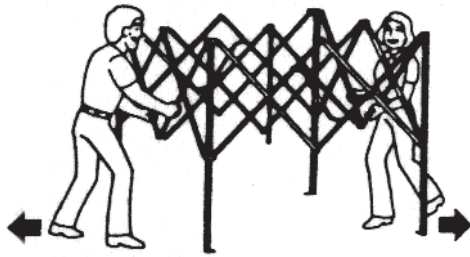

- 1) Grasp the lower "V" at the centre. Lift and pull frame half way out, or if top already on frame go to 4

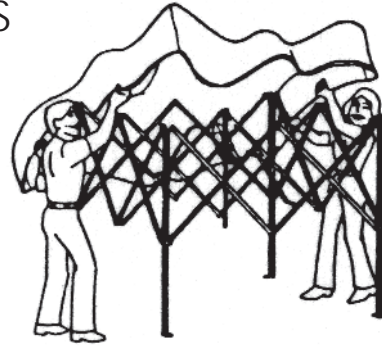


- 2) Place fabric top on frame work. Attach to each corner.

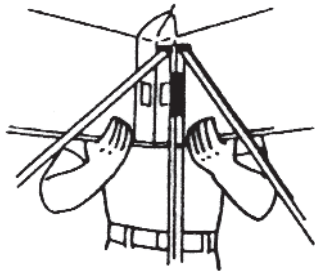


- 3) Attach Velcro to each corner, then pull frame completely out.




- 4) Push plastic socket over button on leg to tension roof.

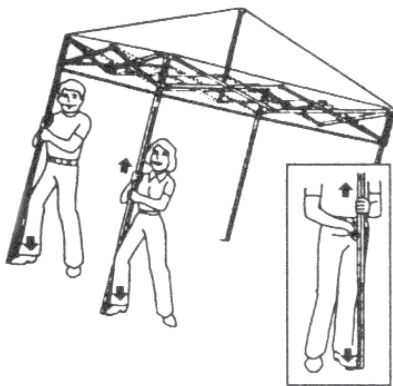

- 5) Lift each leg until the button snaps into the first hole.

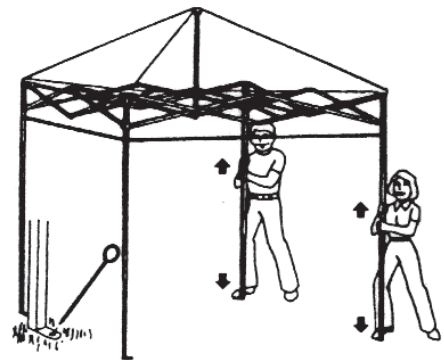

- 6) For height adjustment push leg buttons and slide up to any of the (5) holes.

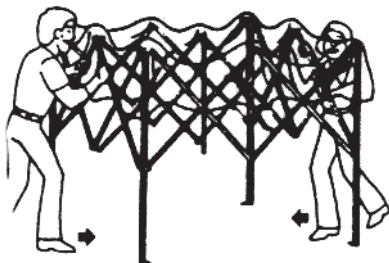

- 7) Push lower buttons to drop canopy to lower level. Push in roof tensioning buttons. Push frame inwards. DO NOT FORCE.

- 8) The top may be left on the frame. To do so pull the fabric up from the centre of the frame completely. This prevents the fabric from being caught in, and cut, by the scissor bars.

Once erected, the canopy must be immediately staked down. Do not leave it unattended. On paved areas, weight bags or guy ropes must be attached. Damp tops must be aired within 24hrs to avoid mildew.

www.instantcanopy.com.au for more information